


Updating Software



If you are running Headsight's Horizon header height control, select the WiFi network of the Horizon base unit and it will automatically pass the update to Truesight 2 as well. If you are not running Horizon, select the Truesight 2 WiFi Network.

Updating with Techlink™ App

1. Download Headsight Techlink App on your iDevice or Android from the App store.
 - Must have Horizon 2.10.0 or later software
 - Login in following on screen instructions
 - Then go to Help Info to learn how to use app.

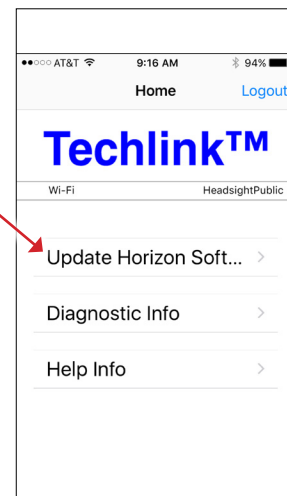

Updating with Truesight 2 with USB

1. Download latest version of Truesight 2 from website.
2. Unzip files, copy file insght2.bin onto root directory on USB flash drive.
 - If you are using Truesight remote display you will need to place agreremote.hex file on a SDcard that is 2GB or less.
3. Plug USB flash drive into USB port on Truesight 2 unit in combine cab.
 - If unit is not yet powered up, cycle key on combine
 - It should start blinking yellow shortly after applying power. If this doesn't happen, unplug and plug the Truesight 2 power.
4. Wait until Truesight 2 unit has a green indicator light (should be no longer than 5 min)
 - If you have Truesight Remote Display attached, power cycle Truesight Remote Display unit.



If the Remote display light is rapidly flashing red, then Truesight Remote Display is updating. Don't cycle power while it is updating. If display flashes "COMM FAILED" then follow updating insructions "Updating Truesight Remote Display with SD card"

5. You can now safely remove the USB flash drive.
 - Be sure to replace USB cover cap
6. Wait for Truesight 2 to appear on VT
 - A power cycle might be needed after update
7. Your Truesight 2 is now updated. Please verify that your Truesight 2 initial settings are correct.

If your Truesight 2 units fail to update you must do a complete format on USB drive to a (FAT) file type and then recopy insght2.bin to root directory.

Updating Truesight Remote Display with SD card (2GB or less)

1. Remove the left-hand cover of the Truesight remote and retain the 4 attaching screws.
2. Insert the SD card into the slot on the remote with the Power already turned ON.



3. With the SD card already in the slot, cycle Power to the Truesight Remote Display to begin updating software.
4. Wait until the yellow “loading” light stops flashing.
 - The yellow light is behind the SD card in the Truesight remote
5. Verify that the update was successful by reading software version displayed on the startup screen.
 - Software versions should match between Truesight 2 Base (B) and Truesight Remote Display (R) when both are updated.
6. Remove SD card and reinstall the cover on the remote.
7. Follow Initial Truesight Setup and Calibration instructions of manual.



```
TRUESIGHT V1.00R
          V1.00B
```